

DS188n

User Manual

Dear user,

Thank you for choosing the FLY DS188n

Please read this User's Manual carefully before using the phone.

While all efforts have been made to ensure the accuracy of all contents in this User's Manual, we assume no liability for errors or omissions or statements of any kind, whether such errors or omissions or statements are a result of negligence, accident, or any other cause. **The contents of this User's Manual are subject to change without notice. The Manufacturer reserves the ultimate right for the interpretation of this manual.**

Table of contents

- 1 Safety and General Information.....
 - 1.1 Safety
 - 1.2 General Information
- 2 Getting started.....
 - 2.1 Appearance.....
 - 2.2 Installing/Removing the battery.....
 - 2.3 Inserting/Removing the SIM card.....
 - 2.4 Installing/Removing T-Flash card.....
 - 2.5 Charging.....
 - 2.6 Power on/off.....
- 3 Guideline of main menu operations.....
 - 3.1 Phonebook.....
 - 3.2 Messages.....
 - 3.3 Call history.....
 - 3.4 Settings.....
 - 3.5 File manager.....
 - 3.6 Fly Buzz.....
 - 3.7 Multimedia.....
 - 3.8 Organizer.....
 - 3.9 SIM Services.....
- 4 Guideline for safe and efficient use.....
 - 4.1 Troubleshooting.....
 - 4.2 Battery maintenance.....
 - 4.3 Care and maintenance.....

1 Safety and general information

Important safety precautions

This section contains important information on the safe and efficient operation of your mobile device.

For your safety, please refer to the guidelines prior to using the phone.

Note: Failure to comply with the following precautions may be dangerous or illegal.

1.1 Safety

Read these concise guidelines. Not following them may be dangerous or illegal.

ROAD SAFETY

Always keep your hands free to operate the vehicle while driving. Park your vehicle safely before using your device.

SWITCH OFF OR USE FLIGHT MODE IN AIRCRAFT

Wireless devices can cause interference in aircraft. Using them in aircraft is both dangerous and illegal. Switch off your device or switch to flight mode before on board.

SWITCH OFF IN HOSPITALS

Follow relevant regulations or rules. Switch your device off near medical equipment.

SWITCH OFF WHEN REFUELING

Switch off your device at a refueling point or near fuels or chemicals.

SWITCH OFF NEAR BLASTING

Don't use your device where blasting is in progress. Observe restrictions, and follow any regulations or rules.

INTERFERENCE

All wireless phones may be susceptible to interference, which could affect the performance.

USE PROPERLY

Use in the normal position explained in the product documentation. Don't touch the antenna unnecessarily.

ACCESSORIES AND BATTERIES

Use only approved batteries and accessories, such as headsets and charger. Use of any unauthorized accessories could cause damages to you and your phone and may be dangerous.

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other Container with metal objects.

- * Never use a charger or a battery that is damaged in any way.
- * Use the battery only for its intended purpose.
- * If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- * Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to

buy a new battery.

- * If left unused, a fully charged battery will discharge itself over time.
- * Use only approved batteries and battery chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- * Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- * Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- * Dispose off used batteries in accordance with local regulations. Always recycle. Do not dispose off batteries in a fire.
- * Do not charge the battery while using the phone.
- * During the course of charging, it is normal to find the battery and the phone slightly heat-up. The phone will automatically protect itself when battery temperature rises so as to control temperature variation.

Note: User to use FLY standard accessories given with the product. This phone is charged only around 50%. Please use up the power and recharge it fully. This is the case with the second recharge. After three repetitions, the battery can achieve its best performance conditions.

1.2 General Precautions

1) Mobile Phone

- ✧ Please use the phone at a temperature of -10°C~55°C and a relative humidity of 35%~85%.
- ✧ Avoid using the phone near regular telephone, television, radio and automatic office equipment, as they may interfere with one another.
- ✧ Please keep the removable SIM card out of the reach of children as there is a risk they could swallow it.

2) Battery

- ✧ Please put the battery in a cool and well-ventilated place out of direct sunlight.
- ✧ Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same.
- ✧ Do not discard battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.

3) Charger

Do not charge the phone in the below environment:

- ✧ Under direct sunlight;
- ✧ Temperature out of range: -10°C to 45°C;
- ✧ Humid, dusty or severely shaking environment (could cause a malfunction);
- ✧ Near appliances such as television, radio (could affect the image, audio effect).

2 Getting started

2.1 Appearance



- | | | | |
|---------------------|-----------------|------------------------|------------------|
| 1. 3.5mm audio jack | 2. Torch | 3. Receiver | 4. Left soft key |
| 5. SIM1 calling | 6. SIM2 calling | 7. Dedicated audio key | |
| 8. Right soft key | 9. FM key | 10. End key | 11. OK key |
| 12. USB jack | 13. Camera | 14. Speaker | |

Key	Function
Dial Key	Dial and receive calls via SIM1 or SIM2 card. View call history of SIM1 or SIM2 in idle mode.
Call End Key	Press and hold to turn the phone on/off. End a call or reject an incoming call. Return to the idle mode.
Left Soft Key	Enter Menu.

Right Soft Key	Access the phonebook list in idle mode. Return to the previous menu.
0 key	Press and hold to open torch.
OK Key	Confirm a selection.
Numeric key	Enter numbers, letters or characters. Select a submenu item with the corresponding number.
*	Press and hold to toggle between *, +, P and W. Press to enter symbol when editing text.
#	Press to switch input modes when entering text. Press and hold to activate or deactivate the Meeting, Silent and Normal mode in idle mode.
Navigation Key	Press to access four functions in idle mode Within a menu, press Up, Down, Left or Right to scroll through menu options.

2.2 Installing/Removing the battery

1) Installing the battery


With the top of battery (the terminal with pole) facing right toward the contacting points in the battery compartment, press the bottom of battery slightly until it enters into place;

Slide battery cover forward along the side slot until it clicks into place.

2) Removing the battery

Slide downward the battery cover;


Use your nail to lightly lift the battery away.

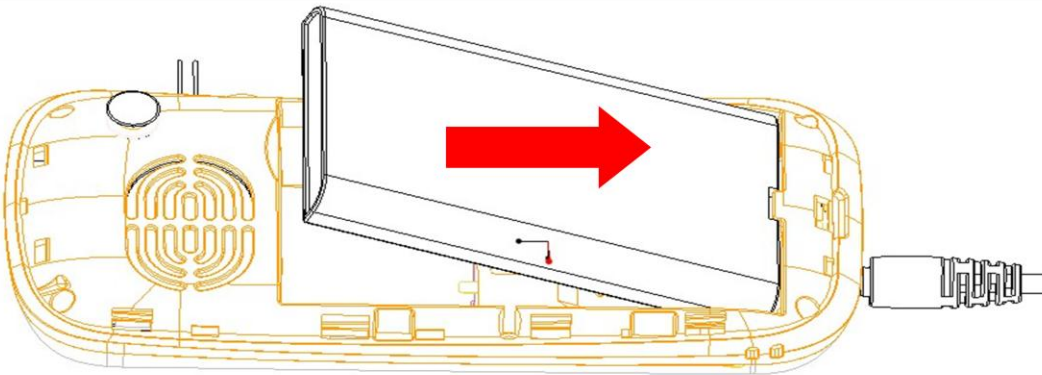

2.3 Inserting/Removing the SIM card

The mobile supports two SIM cards on-line at one time. The method of inserting or removing the two SIM cards is same.


- 1) **Inserting**- make sure that the phone is already switched off and is not put on charge. Remove the battery. Ensure the contacting (golden) points of SIM cards are facing downwards. Slide the card into the carrier.
- 2) **Remove the battery**- Remove the battery and slide the card out of the carrier. Re-insert the battery.

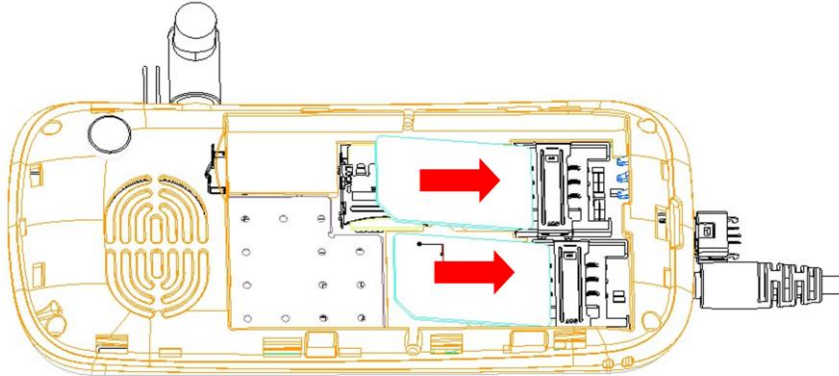

2.4 Installing/Removing T-Flash card

This mobile supports the T-Flash card hot swap feature. User can insert or remove this card at any time regardless of whether the phone is power on.

- a) **Inserting**: open the back cover of the DS188n. The gold contacting points of the T-flash card should face downwards. Align the T-flash. Card in accordance to the picture below. Lock by sliding the metal slider lock.
- b) **Removing**: open the back cover, remove the battery, unlock the metal lock by sliding it. Now remove the card.

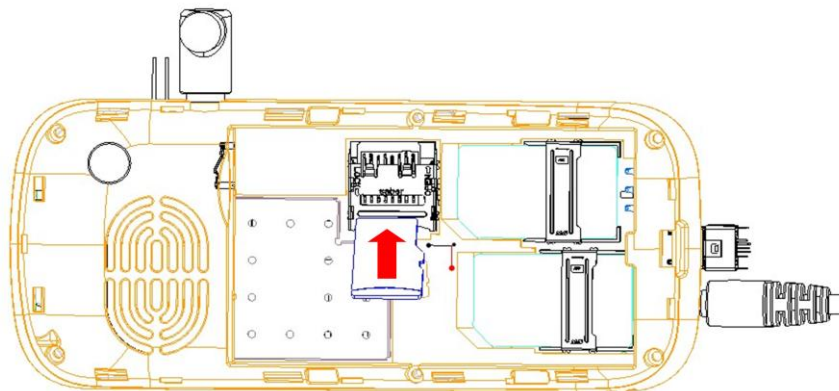

2.5 Charging

Your phone is powered by a rechargeable Li-ion battery. When the battery is weak, the battery sensor informs you. You need charge the battery. When the battery becomes too weak for the phone to operate, the phone switches off

automatically.

- 1) Plug the charger into the charger port on the bottom side of the phone, and then plug the other end of the charger into the appropriate electrical outlet.
- 2) The charging indicator icon starts to flash until charging is finished.
- 3) When charging is complete, disconnect the connector from the phone and unplug the charger from electrical outlet.

2.6 Power on/off

Make sure the battery is inserted:

- 1) Power On: Hold down the end key until the phone-on image displays. After the phone is powered on, it searches for the network automatically.
- 2) Power Off: Hold down end key until the power-off image display.

3 Guide of main menu operations

Phonebook	Message	Call history
Settings	File Manager	Fly Buzz
Multimedia	Organizer	Services

3.1 Phonebook

This feature allows you to store phone numbers and their corresponding names in the memory of your SIM card and phone's memories, at the same time, provides browsing, adding, managing functions.

3.1.1 Add new contacts

Slide navigation key to move the cursor to "Add new contact", add new entry and related information such as Name and Number to phonebook.

3.1.2 Focus on a contact

User can further view, send message, call, edit, delete, copy, send business card, add to blacklist, mark several, caller groups, phonebook settings.

View: To view the contact details.

Send Message: To send message to the contact.

Call: To make a call to the contact.

Edit: To edit the contact.

Delete: To delete the contact.

Copy: To copy the contact to SIM1/SIM2.

Send business card: Send business card by message or Bluetooth.

Add to Blacklist: To add contact to the blacklist.

Mark Several: To Mark the several contacts.

Caller groups: Add groups for call.

Phonebook settings:

- 1) *Preferred settings*: Select preferred storage in phone/SIM1/SIM2.
- 2) *Speed dial*: To add the contact to speed Dial.
- 3) *Extra numbers*: You can set fixed dial numbers.
- 4) *Memory status*: View the memory status in phone/SIM1/SIM2/group.
- 5) *Copy contacts*: Copy all contacts from phone to SIM1/SIM2, or from SIM1/SIM2 to phone.
- 6) *Move contacts*: Move Copy all contacts from phone to SIM1/SIM2, or from SIM1/SIM2 to phone.
- 7) *Delete all contacts*: Delete all contacts in SIM1/SIM2/phone.
- 8) *Back up contacts*: Backup selected contacts in Memory card.
- 9) *Restore phonebook*: Restore all backup contacts.

3.2 Messages

3.2.1 Write message

Type the message to be sent. You can send and save the text message.

Press Ok key to enter recipient contact, search from contacts or from call logs.

3.2.2 Inbox

Through the menu<<message<<inbox you can read received message. In the message list, select one and press option key to do further operations as follow:

View: To view the selected message.

Reply: To reply the message.

Call sender: Make call to people who send the message.

Forward: Forward this message to other contacts.

Delete: To delete the selected message.

Sort by: Message can be sort by sender/subject/unread or read/message size.

Filter by: Message can be filtered by SIM1/SIM2/all messages.

Mark Several: To mark /mark all messages.

Advanced:

1) *Copy to SIM1/SIM2*: To copy the selected message to phone/SIM1/SIM2.

2) *Move to SIM1/SIM2*: To move the selected message to Phone/SIM1/SIM2.

3) *Copy All*: To all the messages to phone/SIm1/SIM2.

4) *Move All*: To move all messages to phone/SIM1/SIM2.

Open selected message by pressing ok key and do further operations as follow:

Reply: To replay the message.

Call sender: Make call to people who send the message.

Forward: To resend that message to others.

Delete: To delete the selected message.

Advanced: Use number, use ussd, copy/move to phone/SIM.

Edit options: Mark text to copy, copy all text to clipboard.

3.2.3 Drafts

You can save a draft here and edit then resend message again. Press option to do further operations as follow:

View, Send, Edit, Delete, Sort by , Mark several, Advanced

3.2.4 Outbox

All the messages which fail to be sent will be saved in the Outbox.

3.2.5 Sent messages

All the messages which have been sent will be saved in it.

3.2.6 Broadcast message

You can see broadcast message here.

3.2.7 Settings

Set the SMS1/SIM2 parameter, review the memory status, Save sent messages, Preferred Storage (Select the storage SIM1/SIM2/Phone).

3.2.8 SMS sign

You can add signature at the end of message with this feature on.

3.2.9 SMS schedule

You can save scheduled message here.

3.2.10 SMS backup

You can back up messages here.

3.2.11 SMS import

You can import messages here.

Memory status

You can check the memory status of phone and SIM1/SIM2 card.

3.2.7 Voice mail

You can read voice mail here.

3.3 Call history

This menu includes SIM 1 & SIM 2 call log, sub menu display is as below.

Missed calls: This menu lets you view the SIM1/SIM2 card recent numbers you missed. You can do further operations by pressing the option key:

View: to view the call details such as Number, Time, Date and no of times missed the calls.

Call: To make a call.

Send message: To send message to the contact.

Save to phonebook: To save the contact number.

Add to Blacklist: To add the contact to blacklist.

Edit Before Call: To edit the contact before calling.

Delete: To delete the contact.

Dialed calls: This menu lets you view the SIM1/2 card recent numbers you dialed. You can do further operations by pressing the option key, the options are same as above.

Received calls: This menu lets you view the SIM1/2 card recent numbers you received. All other operations are same as mentioned in above Dialed calls.

All calls: This menu lets you view the SIM1/SIM2 card recent numbers you dial, receive and missed. All other operations are same as mentioned in above Dialed calls.

Clear logs: You can clear call history includes: dialed call, received call, missed call.

3.4 Settings

Many different features of your phone can be customized to suit your preferences.

3.4.1 Dual SIM Settings

3.4.2 User Profiles

Set the phone ring tone and other prompt mode as you prefer. You can activate and customize the following profiles- General, Silent, Meeting, Outdoor, Earphone.

3.4.3 Time and Date

Set the time and date of the phone, format the date and time and select the home city.

3.4.4 Display

Set the display parameter in idle mode.

Wallpaper: Set the wallpaper in idle mode. The image can be selected from system, or from the file manager menu.

Screen Saver: Set screen saver for your phone.

Power On Display: To select other power on animation from T-flash card.

Power Off Display: To select other power off animation from T-flash card.

Main Menu Style: To select the main menu display style.

Show Date And Time: To select show date and time on idle screen or not.

3.4.5 Phone Settings

Set the phone parameter.

Language: It allows you to select language for the display text(English/Hindi).

Preferred Input Method: It allows you to set the default input mode. Use navigation keys to select input mode and press middle key to confirm. You can select different input methods such as ABC, Hindi, Numeric, Abc, abc.

Greeting text: You can edit greeting text here.

Shortcuts: Set quick operations. You can set the dedicated up, down, right , left navigational key to the functions user want to use quickly by changes the shortcut setting.

Dedicated Key: You can set the dedicated up, down, right, left navigational key to the functions.

Flight Mode: You can select normal mode or flight mode.

UART Settings: You can select SIM1 or SIM2 as UART.

Misc. Settings: You can set LCD backlight and time here.

3.4.6 Call settings

SIM1/SIM2 call setting: User can set Caller ID, Call waiting, Call divert, Call barring.

a. Caller ID: (Need network support)

Set by network: While calling, whether your phone number will be visible or not for the receiver depends on the network presetting.

Hide ID: While calling, the recipient won't see your phone number.

Send ID: While calling, your phone number will be visible for the recipient.

b. Call Waiting:

Activated: If you set the function on, the network will alert you that there is an incoming call. You can keep current call and answer another one.

Deactivate: Cancel call waiting function, then the new incoming calls won't be answered while you're on the phone already.

Query status: Select it to view current status of this function.

c. Call Divert : transfer a call, respectively SIM1/SIM2

All Voice Calls: All incoming calls will be transfer to the appointed number or your voice mail.

IF unreachable: All incoming calls will be transfer to appointed number or voice mail if your phone is unreachable.

If no answer: Calls will be transferred to the appointed number or your voice mail, when your phone is out of the service coverage or is switched off.

If Busy: Calls will be transferred to the voice mail or the preset phone number when you are on the phone.

All Data calls: You can activate, deactivate or query status

Cancel all diverts: All Call Divert functions are cancelled.

d. Call Barring: This function helps you to restrict the incoming and outgoing calls.

Select the desired call and press <OK>, then you can select [Activated], [Off]

or [Query status]. Select [Activated], the phone will need network support current setting. Below are the available restricted call selections.

Option	Description
All outgoing calls	Restrict all outgoing calls
All incoming calls	Restrict all incoming calls
Cancel all barring	Cancel all call restrictions
Change password	Change the password for Call Restrict function

Caution :

1. Some network operators forbid the function. For more details, please contact your network service provider.
2. The network operator will provide you the initial network password while you apply for this service.

Advanced setting: User can set Blacklist, Auto redial, Call time reminder, Reject by SMS, as well as Answer mode.

3.4.7 Network settings

Set the network selection mode. Select “SIM1 network” or “SIM2 network”.

3.4.8 Security settings

SIM1/SIM2 security: If activate SIM lock, before you use SIM card, you need input correct PIN.

Phone security: If activate Phone lock, before you use phone, you need input correct phone password. User can change password.

Auto keypad lock: After activating this function, the phone will be locked automatically if the time you set is arrived, so as to avoid error operations. Press left-soft key and * to unlock/lock screen

3.4.9 Bluetooth

You can share messages, pictures, songs and video via Bluetooth. When you enter Bluetooth interface there are various options such as:-

Power: Choose to activate/deactivate the Bluetooth.

Visibility : to see the Bluetooth visibility

My device: search for device for transferring the data

Search Audio device : Search and pair Bluetooth audio devices

My name: Local Bluetooth name

Advance: to show audio path and address.

3.4.10 Restore Factory Settings

You can restore part of the phone settings as factory settings.

The default code of restoring factory settings is: 0000.

3.5. File manager

You can check the specific content and service condition of the Memory Card via this function. You can also format the memory card.

Open: To open the memory card.

New Folder: To create new folder in memory card.

Format: To format the memory card.

Details: To show memory details of memory card.

While opening the memory card you can select the particular folder to:

Open: To open the selected folder.

New Folder: To create new folder inside the selected folder.

Rename: To rename the selected folder.

Delete: to delete the selected folder.

3.6. Fly Buzz

3.5.1 Games

Race1 is inbuilt game provided to user.

3.5.2 Auto call record

Auto Call Record Function is ON by default. When call is active it will start recording and will save the file in the memory card by making folder with same name and number of caller.

3.5.3 Privacy Protection

You can set data security for phonebook, messages, call history, photos, video player, file manager and keypad lock.

3.5.4 Mobile tracker

If you lose your phone, this function may probably help you to get back your phone.

1. First you should insert SIM card.
2. Enter Settings → Security settings → SIM1 security settings → Mobile tracker.
3. Enter the password (The password is 0000, same as Phone lock password).
4. Set status "ON".
5. Enter "Receive stolen SMS number". You can add number.
6. Finish.

7. Power off. Pull off the SIM card, and insert other SIM card. (If you set SIM1 Security, you will pull off the SIM1 and insert another SIM1).

8. Power on. The handset will send a message to the numbers (You enter the numbers in "Receive stolen SMS number"). You will know which number is using your handset. If you insert former SIM card, the handset will not send the message.

Note: The initial password is "0000." After you change your password, you will need to input the password. If you forgot your password, contact the service center. Please be informed that the Mobile tracker message is support only SIM1. Please contact your service provider for more information.

3.7. Multimedia

3.7.1 Camera

With the phone camera feature, you can take picture at any time. After setting the parameter, the preview interface will show the effect. Press middle key to take photograph. When you finish photographing, the image will be saved as .JPG file.

Other camera options include:

Switch to Recorder: Change to video recorder mode.

Photos: Review all captured photos.

Camera Settings: You can change the camera settings such as Shutter sound, Anti Flicker, Delay timer.

Image Settings: You can change the image settings such as image size, image quality.

White balance: You can adjust white balance.

Scene mode: You can select scene mode like auto or night.

Restore: To restore the camera settings.

3.7.2 Photos

You can review all photos saved in T-flash card.

3.7.3 Video recorder

Through the menu, you can record video by yourself. Press middle key to start recording. During scanning, press Option to access:

- ✧ Switch to camera: stop the recording and switch to camera.
- ✧ Camcorder settings: set the Anti -flicker.
- ✧ Video settings: set the video quality.

Press middle key to start recording. During recording, press right soft key to stop and play back.

3.7.4 Video player

Enter the video playlist interface, press left soft key, you could go on following

operations:-

Play: Play the selected video file.

Send: Send the selected video file by Bluetooth.

Rename: To rename the selected file.

Delete: To delete the selected file.

Press left soft key to enter video settings, press up navigation key to play in full screen, press down navigation key to stop, press right soft key to go back.

3.7.5 Audio player

User can directly play audio player by dedicated audio player keys or by going through menu<<multimedia<<Audio player. It will refresh the audio file list, select one file from the list. Press right soft key to exit and return list. When you use headset to play music, press the button on the headset can move to next music. This phone could play the MP3 stored in the Memory Card and support the background play.

On the audio player interface, move cursor to the shortcut keys on the screen, you could rapidly operate the MP3 functions.

Press ▶ can play the MP3;

Press || can make a pause;

Press ⏮ ⏭ can choose the previous and next MP3.

3.7.6 Sound recorder

You can record sound through this menu. Press the ok key to start the recording. Press right soft key to go back. Press the left soft key and have following option: Record, list and settings. Please make sure that you have inserted T-flash card.

3.7.7 FM radio

User can start FM radio by going through menu<<Multimedia<<FM Radio and attaching the earphone with the phone or directly by pressing the dedicated FM Key after that you can press the four top shortcut key to play/pause, move to previous/next channel. And the headset button supports to switch to next channel. Press right soft key to exit, and press left soft key to operate:

Channel List: show all radio channels. Press OK key to edit the frequency.

Manual Input: input channel manually.

Auto search: search channel automatically.

Settings: set the radio player parameter.

Record: Record voice during playing FM.

File list: View the recorded FM sound.

3.8 Organizer

3.8.1 Torch

Set torch on or off, you can long press 0 key to turn on torch.

3.8.2 Calendar

Through the calendar, you can view the date and task list at specific day. Press left soft key to access the following options: View tasks, Jump to date, Go to today, Week starts on, Panchang, Festival list, On screen display.

3.8.3 Alarm

Press ok key to open alarm and set the parameters. Press right soft key to go back to organizer. Press left soft key to save the alarm. when the specific time arrives, the phone will ring even if the phone is powered off.

3.8.4 World clock

View the time of countries.

3.8.5 Calculator

The function will make your device a calculator with which you carry out simple mathematical calculations.

3.9 Services

You look at the STK information of SIM card.

4 Guideline for safe and efficient use

4.1 Troubleshooting

Problems	Reasons and Solutions
Can't switch on	<ul style="list-style-type: none">■ Press and hold end key until image appears on the display.■ Check the battery contacts. Remove and insert battery and switch your phone on again.■ Check the battery charge level.
Can't connect to network	<ul style="list-style-type: none">■ Move into an area of better coverage.■ Beyond the network cover area.■ Contact your service provider if your SIM card is invalid.
The audio quality of the call is poor	<ul style="list-style-type: none">■ Press navigator key to increase the volume when you are in a call.■ Check the signal strength indicator on the display.■ The line is busy and can not be connected to network; you can not make a call.
Standby time too short	<ul style="list-style-type: none">■ When failing to connect to network, the phone will keep searching base station that consumes much battery and reduces standby time. Move to an area with stronger signal strength or switch your phone off temporarily.■ Replace the battery.

SIM card error	<ul style="list-style-type: none"> ■ Make sure that the chips in SIM card are not damaged; use the clean cloth to scratch it. ■ Make sure that SIM card is inserted correctly. ■ SIM card invalid. Contact your service provider.
Can not dial calls	<ul style="list-style-type: none"> ■ Make sure that the number you dialed is available and the dial key has been pressed. ■ Make sure that there is enough money to make a call. ■ Make sure that SIM card is valid. ■ Fixed Dial is set or has call barring feature turned on. Deactivate fixed dial function or call barring.
Can not receive calls	<ul style="list-style-type: none"> ■ Make sure that your phone has connected to network (Check if the network is too busy or invalid). ■ Make sure that there is enough money to receive the call. ■ Make sure that SIM card is valid. ■ Check call divert settings and incoming call barring settings.
The battery won't charge	<ul style="list-style-type: none"> ■ Make sure that the battery is inserted correctly. Securely connect the charger to the phone. ■ Only charge the battery in an environment where the temperature does not go below -10°C or above 55°C. ■ The battery or charger need to be changed.
Can not set some functions	<ul style="list-style-type: none"> ■ The operation is wrong. ■ The network providers do not support the function, or you don't apply the function.

4.2 Battery maintenance

- 1) A new battery will require two or three times full charge/discharge cycles in order to achieve its optimum performance.
- 2) Batteries typically have several hundred charge cycles in their life span. When the talk time and standby time decrease obviously, replace a new battery.
- 3) If left unused, a fully charged battery will discharge itself in approximately 24 hours.
- 4) To extend the life of the battery, you can get the battery fully discharge until the phone turns itself off. Do not attempt any other unapproved discharge ways.
- 5) When the battery level is low and only a few minutes talk time remain, a warning signal will sound. When the battery is completely discharged, your phone will turn off.

TECHNICAL SPECIFICATION	
GSM NETWORK	900/1800MHZ
DISPLAY SIZE	4.6cm
BATTERY CAPACITY	1500 mAh
CHARGER SPECIFICATION	INPUT:AC 100-240V/50-60Hz
	OUTPUT:DC 5V/550mA
SAR VALUE	0.837W/Kg
CAMERA RESOLUTION	VGA CAMERA

Service Centre No.:
For any query regarding your handset:
Contact no: 18001030106
Email id: customercare@flyphone.in