

Fly_SX260
Dual SIM Phone
User Manual

. All rights are reserved. No part of this document may be reproduced without our written permission.

While all efforts have been made to ensure the accuracy of all contents in this User's Manual, we assume no liability for errors or omissions or statements of any kind in this User's Manual, whether such errors or omissions or statements are a result of negligence, accidents, or any other cause. The contents of this User's Manual are subject to change without notice.

Protect our environment! We strive to produce products in compliance with applicable environmental standards. Please consult your local authorities for proper disposal.

Note: Specifications and information in this User's Manual are furnished for information only and are subject to change without prior notice. These should not be construed as a commitment or a certificate of technology. FLY mobile phones assumes no responsibility for any errors or omissions that may appear in this manual.

Table of Content

FOR YOUR SAFETYERROR! BOOKMARK NOT D

GENERAL INFORMATION

Antenna

Network Service

Accessories

Privacy

KNOW YOUR MOBILE PHONE

Positions of Phone Keys

Functions of Keys

Back Light

Display Screen

IMPORTANT INFORMATION

Use of Passwords

Battery Information

Usage & Maintenance

Emergency Calls

Services.....

Video Player.....

APPENDIX

Appendix A: Guidance on Entry Methods

Appendix B: Troubleshooting **Error! Bookmark n**

GENERAL INFORMATION

Antenna

Your phone has a built-in antenna. Don't touch the antenna area unless necessary when the phone is switched on. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise. Use of other antenna devices could damage your mobile phone and affect performance.

Network Service

To use the device you must have service from a network service provider. Some features are not available on all networks and some other features may require a subscription from your network service provider. Check with your service provider for instructions on use and details about fees in your home network and when roaming on other networks.

Accessories

Your FLY mobile phone comes with a rechargeable Li-ion battery. Some batteries

KNOW YOUR MOBILE PHONE



Key	Name	Description
	Calling key	Make or answer a call; in Standby mode, access the redial function to retrieve recently dialed, missed or blocked numbers.
	Left soft key	Execute functions indicated at the left prompt bar on the screen.
	Music shortcut key	In Standby mode, access Audio player.
	Camera shortcut key	In Standby mode, access Camera function.
	Right soft key	Perform functions indicated at the right prompt bar on the screen. In Standby mode, long press the key to access the standby menu.

	<p>Numeric keys</p>	<p>Enter numbers, letters and characters. In Standby mode, press and hold to activate Meeting mode and “0” to activate Torch. In Edit mode, press # to switch to a different method.</p>
--	---------------------	--

Back Light

You can set the Back Light for the display and keypad through -Options in the Settings application.
 The backlight will turn off automatically after a while if there is no key operation.

Display Screen

Your mobile phone has a single screen display, which consists of three main areas.
 The first line displays status icons, which indicate the signal strength, the battery level, and the power of the battery, etc.

The -middle lines display text and graphics, including numbers, text, animations, and icons.

IMPORTANT INFORMATION

Use of Passwords

Your mobile phone and SIM card have various passwords. These passwords prevent unauthorized use of your phone and SIM card. You can change the **PIN** and phone password in Settings > Security settings.

Phone Code

. The factory setting for the phone code is **0000**. If phone lock is enabled, you will be asked to input the phone password when you switch on your phone.

PIN (4 to 8 digits)

The PIN (Personal Identification Number) is usually supplied with the phone. When the PIN code request is enabled, the password is asked every time the phone is turned on.

If a wrong PIN is entered 3 times in a row, the SIM card will be locked and you will need to use the PUK to unlock it. PUK is usually set by the network operator.

1. Enter the correct PUK to unlock the SIM card, and then enter the new PIN. Press **OK**.
2. If you are prompted to enter the new PIN again, enter it and press **OK**.
3. If the PUK is correct, the SIM card will be unlocked and the PIN will be reset to the factory setting.

Barring Code

To activate call barring, you need a Barring Code. You obtain the passcode from your service provider.

Battery Information

Charging and Discharging

- The charger is designed to be used in temperatures between 0°C to 40°C.
- Do not charge the phone in wet and damp conditions.
- Only use batteries approved by the phone manufacturer and recharge the battery only with the chargers approved by the manufacturer.
- We strive to ensure our products are in compliance with global environmental standards.
- Your FLY mobile phone comes with a rechargeable Li-ion battery. Some batteries perform best after several full charge/discharge cycles.
- .
- When the battery level is low, “Low Battery” will be displayed on the LCD. If you have selected Alert Tone for the same, the phone will sound the tone.
- When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for longer than 12 hours, since overcharging can damage the battery.



Batteries must be recycled or disposed of properly. Please follow local regulations for disposal of batteries.

Usage & Maintenance

Take a moment to review the following usage & maintenance tips, which will help you fulfill any warranty obligations and enjoy this product for many years.

- Keep your phone and all its parts and accessories out of children's reach.
- This Product is not water-resistant. Keep it dry. Precipitation, humidity, and moisture containing minerals will corrode the connectors.
- Always handle this product with care and keep it in a clean and dust-free environment.
- Do not expose this product to extreme high or low temperatures. Your phone operates best in temperature between 15 °C and 25°C. Minimum and maximum temperatures recommended by the manufacturer are -10°C and 55°C.
- Do not expose it to open flames or lit tobacco products.
- Do not attempt to disassemble or modify your phone. Only authorised service technicians should perform this service.
- Do not drop, throw or try to bend your -phone.
- Do not paint your -phone.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean your phone.

While making an emergency call, please remember to give all information particularly as possible. Never disconnect the call till you are given permission to do so.

GETTING STARTED

First Call

- . Enter the area code and the phone number and press Calling Key.
- Tip:** Before you get started, you must insert a valid SIM card in your phone and charge the battery.
- SIM Card: Please refer to “Inserting a SIM Card” for more reference on SIM card installation.
 - Charging the battery: Please refer to “Battery and Charging” for more information.

Inserting a SIM Card

Your mobile phone number, PIN (Personal Identification Number), PUK1 (Personal Unlock Key), PUK2 (Personal Unlock Key2), IMSI (International Mobile Subscriber Identity), the network information, the phonebook data, SMS messages) and other data are stored in your SIM card.


Note: This particular phone model only supports the SIM cards of 1.8V and 3V.

- Some network operators don't offer PIN2 and PUK2, so functions using these passwords will be unavailable.
- The SIM card and its contacts can be damaged by scratches or bending. Be careful while handling, inserting or removing the card.

- If “Insert SIM” still appears on the screen after you have inserted correctly, there may be something wrong with your SIM card. Please contact your network service provider for assistance.
- If the screen displays that the SIM card is locked permanently, please contact your network service provider.

Inserting a Memory Card

Open the cap from the Hinge Type Connector. Lay the T-Flash card with its contact facing down on the Connector and then close it. Align the card to the sign as shown in the picture:

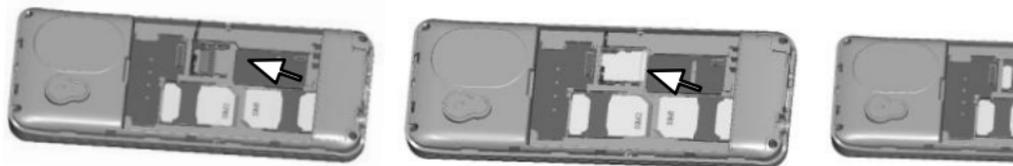

CALLING

Making Calls

1. Enter the phone number (with the area code)
2. Press the Calling Key to make a call.
3. Press the End Key to end a call.

Clear Previous Call Logs

Press the Right Soft Key to delete the last number on the screen. Long Press the Right Soft Key to clear all the numbers that you have entered.

Making a call from the Phone Book

1. Press the Right Soft Key to access the **Phone Book**.
2. Scroll the Up/ Down key to select the desired number , and press the Calling Key to call that number.

Last Number Redial

1. In the Standby mode, press the Calling Key to access the **Call Logs**.
2. Press the Up/Down key to reach the desired number or name and press the Calling Key.

Speed Dialing

GUIDE TO MENU OPERATIONS

All function options about the mobile phone are listed as below descriptions:

Messages

You can use Messaging to exchange text and multimedia messages with friends.

Send SMS

1. Choose Menu > Messages to start messaging.
2. On the Messaging screen, choose Create New > SMS.
3. Use the keyboard on your phone to type your message.
4. Pressing Options while composing a message gives you various SMS such as insert picture, video, template and so on.

Inbox: Store the messages received.

Draft Box: Store the messages unfinished

Out Box: Store the messages that have failed to send out

Sent Box : Store the messages that have been sent successfully

Menu > Messages> Cell Broadcast

Cell Broadcast is an information service provided by the network operator. The service can be almost anything from weather forecast to cricket score updates, road conditions and so on.

You can choose your broadcast message setting by going to Menu > Messages > Settings> Cell Broadcast.

Note: Please contact your service provider for the details of the settings that are displayed by default. Similarly, from here, you can choose the settings for SMS, MMS, and voicemail.

Message Settings

Menu > Messages> Settings

You can choose your preferences for SMS, MMS, Cell Broadcast, and Voicemail from here.

You can also view your message related memory status.

Phonebook

Through your contacts list, you can access your existing contacts as well as organize groups, access SIM-related services and blacklist undesired contacts.

the number, or delete and so on.

Choose an entry in the call log and then, choose Delete to remove the entry from the log. View Missed, received, dialed and blocked calls by choosing the appropriate call history.

Settings

You can go to Settings to set various preferences for your phone.

In the Standby mode, press the Left Soft Key to access **Menu > Settings**.

General

You can choose one mode as per your desire.

Personalization

Display: With this function you can configure the basic status characteristics including Wallpaper, Auto change wallpaper, Screen auto lock, Date and Time.

Language: Select the desired language for the display text.

Navigation keys: select the shortcut functions you want

Time and Date:

- **Set home city:** Select the desired home city.
- **Set Time/Date:** Enter the current time and date.

Phone

- **Call Waiting:** On Activation, the network will notify you of a new incoming call while you have a call in progress (Network Service).
- **Call Divert:** This network service allows you to divert your incoming calls to another number. For details, contact your service provider.
- **Call Barring:** This network service allows you to restrict incoming calls to your phone. For details, contact your service provider.

Network Settings

You can configure the following options as desired: SIM1/SIM2 Network Mode (Automatic - suggested), GPRS transfer pref. Data prefer. Please contact your network operator for more information.

- **Line Switching:** Switch between Line 1 or Line 2, the default is Line 1.

Advance settings

- **Auto Redial:** You can set the Auto Redial function On or Off. When On, the phone will automatically redial the last called number after a call fails to connect to the number. Under auto redial your phone would automatically redial up to 10 times. You can't make any other calls when the Auto Redial is ongoing. Press Cancel to end Auto Redial.
- **Call Time Reminder:** In order to save the call cost, this function

Set a password, you can track your phone if stolen

Privacy Protection

Did someone scan your Personal Messages when you were out? Get with MV264 Private Menu advantage. Keep your Call history, SMS, Photo File and Key lock protected so that no one gets to know about your secret. default password is 0000.

Auto Call Record Setting

When turned on, the phone will automatically record the call.

Games

There is an interesting game in the phone. Please refer to instruction Games menu for more details.

Facebook / Twitter/MSN/Skype/Yahoo

Internet service enables you tour around the Internet world easily and ha

Note: GPRS should be activated from the operator side .

Media Tools

King Movie

You can see many movie with this player

Sound Recorder

Press center button to start recording, press the right soft key to stop recording.
Press the left soft key options are: play, new, delete, view files.

Profiles

This mobile phone provides eight kinds of profiles: general, meeting, silent, personal, headset, Bluetooth, You can set your profile according to the situation and environment.

File Manager

It provides you the functions such as browsing media files, checking storage space and formatting function. When browsing the media files, you can perform operations on the selected files such as copy, delete etc.

Organizer

Calendar

Access this menu, the calendar will be shown on the screen. Press the right soft key to change the date, and the calendar shown on the screen will be updated accordingly.

Alarm

Set the alarm time and it will remind you by alert tone or vibration when the time comes.

Shortcuts

You can select application quickly using this function. If you assign the the Dedicated of the key, you can run the application as the usual m when pressing the direction key in standby mode.

E-book

Read txt format file. You can complete the following features: View, del all, scroll style, language code and information. While reading, press “Op the work such as full screen, my bookmark, scroll style, language information.

Music

Also it is called music player. Your FLY_SX260 comes with a music player you enjoy any music of your choice through your TF card. You can easily your favorite music from your PC to the TF card and experience a whole interesting and melodious music.

Press the phone’s up and down keys. A panel opens to show the current volume; the indicator moves as you adjust the volume.

Video Player

Access the menu, you can enter film list and press “options” to choose clip to play, send, rename, delete, delete all files, view details. While play press right or left key to adjust the rate of progress, up and down key volume, center key to play or pause. Avi,3gp and mp4 formats are supported.

APPENDIX

Appendix A: Guidance on Entry Methods

This phone provides input methods, which can be used in editing the P short messages, alarms and other text applications.

The Icons of Input Methods

After entering different kinds of edit windows (including edit phone messages. etc.), the icons of input are as follows:

“**123**”: The Entry method of Numeric appears as: “123”

“**ABC**”: The entry method of Multi tap ABC appears as: “ABC”

“**abc**”: The entry method of Multi tap abc appears as: “abc”

“**Abc**”: The entry method of Multi tap Abc appears as: “Abc”

“**HI**” : The entry method of Multi tap Hindi appears as: “HI”

How to Input Special Symbols

If you want to input special symbols, such as "!"? = < >”, etc., please:

Press the Left Soft Key to access **Menu** for the **Insert Symbols** in **method** or press the * Key to display the symbols. Press the Up/Down, or Key to move the cursor in the symbol table, and select one symbol. Press Soft Key to cancel the symbol selection.

TROUBLESHOOTING

V. How To Resolve Malfunction

1. For troubleshooting your FLY mobile phone, please refer to the following tips. If the issue doesn't get resolved with these quick tips, please contact one of our Authorized Care Centers. You may locate the nearest centre at <http://flymobile.in/service-center/store-locator.htm>

2. My Phone would not power on?

Possible Reasons for Malfunction	Solutions
1. Press [Power] key shorter.	Long press [Power] key over 3 seconds and then try power on again.
2. Battery has run out.	Charge your battery for a few minutes and then try power on again.
3. The battery is installed incorrectly.	Check if the battery is seated correctly in the device.
4. Abnormally using leads phone not to power on.	Please contact the local service center.

3. Audio quality seems poor?

1. Phone power off.	Please power on your phone.
2. Phone is out of the network service area.	Please make sure the current network has good service.
3. Your SIM card is not proper or out of service fee.	Make sure your SIM card can work.
4. Perhaps you set up call barring.	According to your needs, please deactivate call barring.
5. The phone screen is locked.	Please unlock the screen according to the prompts.

6. I cannot hear and/or be heard from the other side?

Possible Reasons for Malfunction	Solutions
1. Call volume is low.	Please raise the phone call volume.
Mute icon is pressed during the call	Please deactivate the Mute function.
The signal is poor or unstable	Please move to an open area or a place with good signal strength.

7. The call alert doesn't ring when a call coming in?

Possible Reasons for Malfunction	Solutions
1. Incoming call alert is set as silent	Please re-set the incoming call alert.

2. T-Flash card is damaged.	Please change T-Flash card.
1. Make sure microSD card is mounted on your device	Go to Settings > SD card & device storage and check if Un-mount SD card is highlighted or else tap Mount SD card.

10. Phone is out of memory?

Possible Reasons for Malfunction	Solutions
1. MMS or SMS takes up too much storage space.	Please delete the unwanted SMS or MMS to release space.
2. The browsing history takes up too much storage space.	Select "Browser - Settings - Privacy" to clear the cache to release space.
3. Running too many programs leads to lack of space.	Enter "Settings –Applications—Manage applications" or "Settings –Applications—Running services", then close some running applications or services.
4. You have installed many applications in your phone.	Enter "Settings – Applications — Manage applications", choose and touch the applications installed by yourself, to close them to release space. Note: The built-in applications cannot be uninstalled.

For your safety:

Read there simple guidelines before using the device



 
ROAD SAFETY COMES FIRST

Obey all local laws, Always keep your hands free to operate the vehicle while driving. Consideration while driving should be road safety.



INTERFERENCE

All wireless devices may be susceptible to interference, which could affect performance.



ENHANCEMENTS AND BATTERIES

Use only approved enhancements and batteries. Do not connect incompatible products.





SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the device off near medical equipment.



SWITCH OFF WHEN REFUELING

Do not use the device at a refueling point. Do not use near fuel or chemicals.



PROTECT THE ENVIRONMENT

Do not dispose of batteries in a fire or as household trash. Obey any local battery recycling or environment protection policy.



PROTECT THE CHILDREN

Do not store any small parts of the device such as a memory card where children may

TECHNICAL SPECIFICATION	
GSM NETWORK	900/1800MHZ
DISPLAY SIZE	6.6 cm